

The HomeAware Vibe is a new accessory that connects to the HomeAware main unit, transmitters, and receivers. This personal pager will alert you to events like the smoke/CO detector, the baby crying, the phone ringing and many more. The HomeAware Vibe will alert you with multiple colored LED lights, vibration and an audio alert, all patterned to a specific alert. Simply clip the HomeAware Vibe to your waistband or slip it into a pocket and enjoy the freedom of never missing an alert again. In fact the HA360VB1.2 can also act as an emergency alert notification device in case you have fallen or have another emergency you need help with. By simply pushing the PAGE button on the front of the unit it will send an alert notification to all your HomeAware receivers and the main unit. Because it is portable and the increased range due to the HomeAware's mesh network, you will be safe throughout your house and out.

HA360VB2.1 Features

- Emergency alert button when help is needed. Ultra-high brightness strobe for maximum visibility.
- Clips easily on waistband and small enough to slip into a pocket.
- Connects to the HomeAware main unit, transmitters, and receivers.
- Alert patterns unique to you, vibrate, sound, flashing lights, or different colors for different alerts.

Battery Features

Note: After you have received your HomeAware Vibe, please fully charge before first use. A complete charge will take approximately 3 hours.

- Green – charge complete
- 1 Red light – battery low
- 2 Red Lights – Battery half charged

If the Vibe is switched to Off the battery indicators lights will not be lit but the Vibe is still charging.

Low Battery Check

The Vibe will alert you when the battery is getting low. Depending on what switch or switches that are on, it will be a single yellow blink, vibration or beep.

TO LINK THE HOMEAWARE VIBE WITH THE HA360MVS

Linking:

- Press SET UP button on the main unit and the word **LINK** will be shown on the display, press ENTER. **LINK** will begin blinking.
- Press and hold down the **PAGE** button on the front of Vibe, **PICK DEVICE** will be shown on display of the main unit. Press the blue MINUTE/down arrow button until the display reads **HELP**, then press ENTER. **DONE** will be shown on the display when linking is completed.
- You are now ready to use your HA360 Vibe.

Switch / Page Button Controls

There are several ways that the Vibe can be set to notify you of alerts happening in or around your home. Pick one, two or all four with a flip of a switch.

- **V** - Vibrate
- **S** - Sound
- **F** - Flash
- **C** - Color
 - Door - Green (additional accessory required - HA360DB)
 - Baby – Blue (additional accessory required - HA360SSC)
 - Phone – Orange (Plug your phone into the back where it says TEL and the other end into a RJ11 wall jack, your landline phone is now ready to send phone notifications to the Vibe.)
 - Smoke/CO – Red
 - Cyan – Universal (additional accessory required - HA360BU)
- Low Battery – Single Yellow blinking light
- Lost Link – Double Yellow blinking light

PAGE Button / Emergency Help

When the PAGE button on the front of the HomeAware Vibe is held down for 3 seconds, it sends a **HELP** alert to the main unit.



If the Vibe and the Main Unit have lost connection, it will need to be reset

- Push all switches to the off position except for the On/Off power switch leave in the on position.
- Press and hold the PAGE button, the LED light will be a moving purple.
- Reset is completed when the LED light is a solid orange.

The Vibe is now ready to be linked to the Main Unit.