

# ALERTMASTER™ AM-6000

The All-In-One Wireless Notification System



## Users' Guide

<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	1
<b>INTRODUCTION</b> .....	4
<b>PACKAGE CHECKLIST</b> .....	5
<b>FEATURES IDENTIFICATION</b> .....	6
<b>INSTALLATION AND SET UP</b> .....	7
A. Base unit .....	7
B. Doorbell .....	8
C. Clock .....	8
<b>OPERATIONS</b> .....	8
A. Monitoring functions .....	8
B. Master Reset .....	11
C. Notification Priority .....	11
D. Security Timer .....	11
E. Battery .....	12
<b>OPTIONAL ACCESSORIES</b> .....	14
A. Remote Receiver .....	14
B. Personal Signaler .....	14
C. Personal Tactile Signaler .....	14
D. Audio Alarm Transmitter .....	14
E. Baby Sound Monitor .....	14
F. Door Announcer .....	15
<b>IN CASE OF DIFFICULTY</b> .....	16
A. Channel Setting .....	17
<b>REGULATORY COMPLIANCE</b> .....	18
<b>UK STATUTORY INFORMATION</b> .....	24
<b>WARRANTY</b> .....	27
<b>INDEX</b> .....	28

## Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and persons including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the AM6000.
3. Do not use this product near a bathtub, wash basin, kitchen sink or laundry tub, in a wet basement, near a swimming pool or anywhere else there is water.
4. Avoid using a telephone (other than a cordless type) during a storm. There may be a remote risk of electrical shock from lightning.
5. Do not use a telephone to report a gas leak in the vicinity of the leak.
6. Unplug this product from the wall outlets before cleaning. Do not use liquid cleaners or aerosol cleaners on the AM6000. Use a damp cloth for cleaning.
7. Place this product on a stable surface. Serious damage and/or injury may result if the AM6000 falls.
8. Do not cover the slots and openings on this product. This telephone should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
9. Operate this product using the electrical voltage as stated on the base unit or the owner's manual. If you are not sure of the voltage in your home, consult your dealer or local power company.
10. Do not place anything on the power cord. Install the telephone where no one will step or trip on the cord.
11. Do not overload wall outlets or extension cords as this can increase the risk of fire or electrical shock.
12. Never push any objects through the slots in the AM6000. They can touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock. Never spill liquid of any kind on the product.
13. To reduce the risk of electrical shock, do not take this phone

## Important Safety Instructions

- apart. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
14. Unplug this product from the wall outlets and refer servicing to the manufacturer under the following conditions:
    - A. When the power supply cord or plug is frayed or damaged.
    - B. If liquid has been spilled into the product.
    - C. If the product has been exposed to rain or water.
    - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment may require extensive work by a qualified technician to restore the product to normal operation.
    - E. If the product has been dropped or the case has been damaged.
    - F. If the product exhibits a distinct change in performance.
  15. Never install product wiring during a lightning storm.
  16. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
  17. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
  18. Use caution when installing or modifying telephone lines.
  19. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

### **ADDITIONAL SAFETY NOTES FOR CANADIAN USERS**

The following items are included as part of the CS-03 Requirements. The standard connecting arrangement for the equipment is CA11A. This product meets the applicable Industry Canada technical specifications.

**NOTICE:** The Canadian Department of Communications

## Important Safety Instructions

label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective operational and safety requirements. The Department does not guarantee that the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**CAUTION:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate. The Ringer Equivalent Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalent Number of all the devices not exceed five.

## INTRODUCTION

---

Thank you for selecting the exciting new ALERTMASTER AM-6000 from AMERIPHONE. It has been designed to meet the highest quality standards to provide you with years of convenient and trouble-free service.

Please read these operating instructions thoroughly before using your notification system. Keep this manual for future reference.

You must save your sales receipt as proof of purchase in the event that you need warranty service.

If you have any questions about your Alertmaster AM-6000, please call your authorized dealer or our Customer Service Department at: 800-874-3005  
E-mail: [ameriphonecs@plantronics.com](mailto:ameriphonecs@plantronics.com)  
Website: [www.ameriphone.com](http://www.ameriphone.com)

## PACKAGE CHECKLIST

Please make sure your Alertmaster AM-6000 package includes the items as shown below:

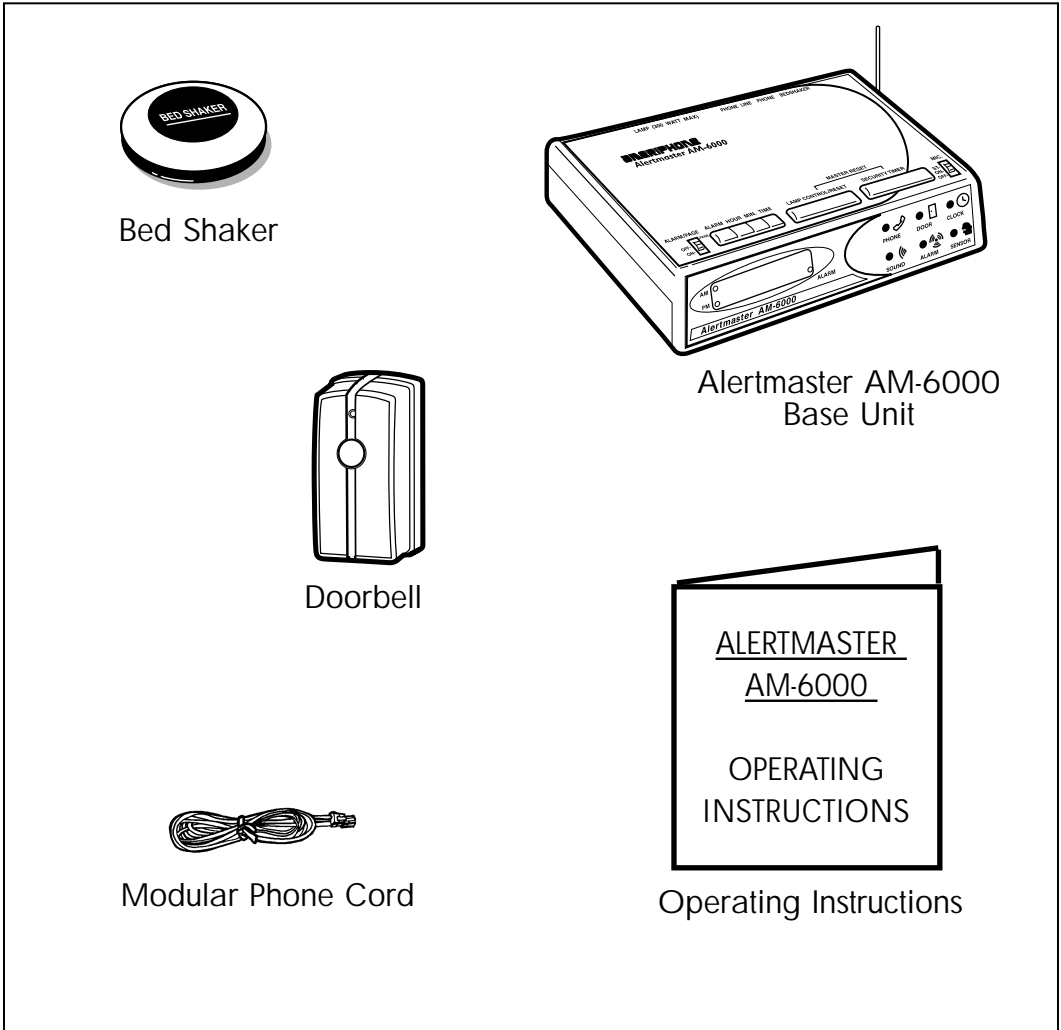


Fig. 1- ALERTMASTER AM-6000 base unit, bed shaker, modular phone cord, doorbell, operating instructions.

# FEATURES IDENTIFICATION

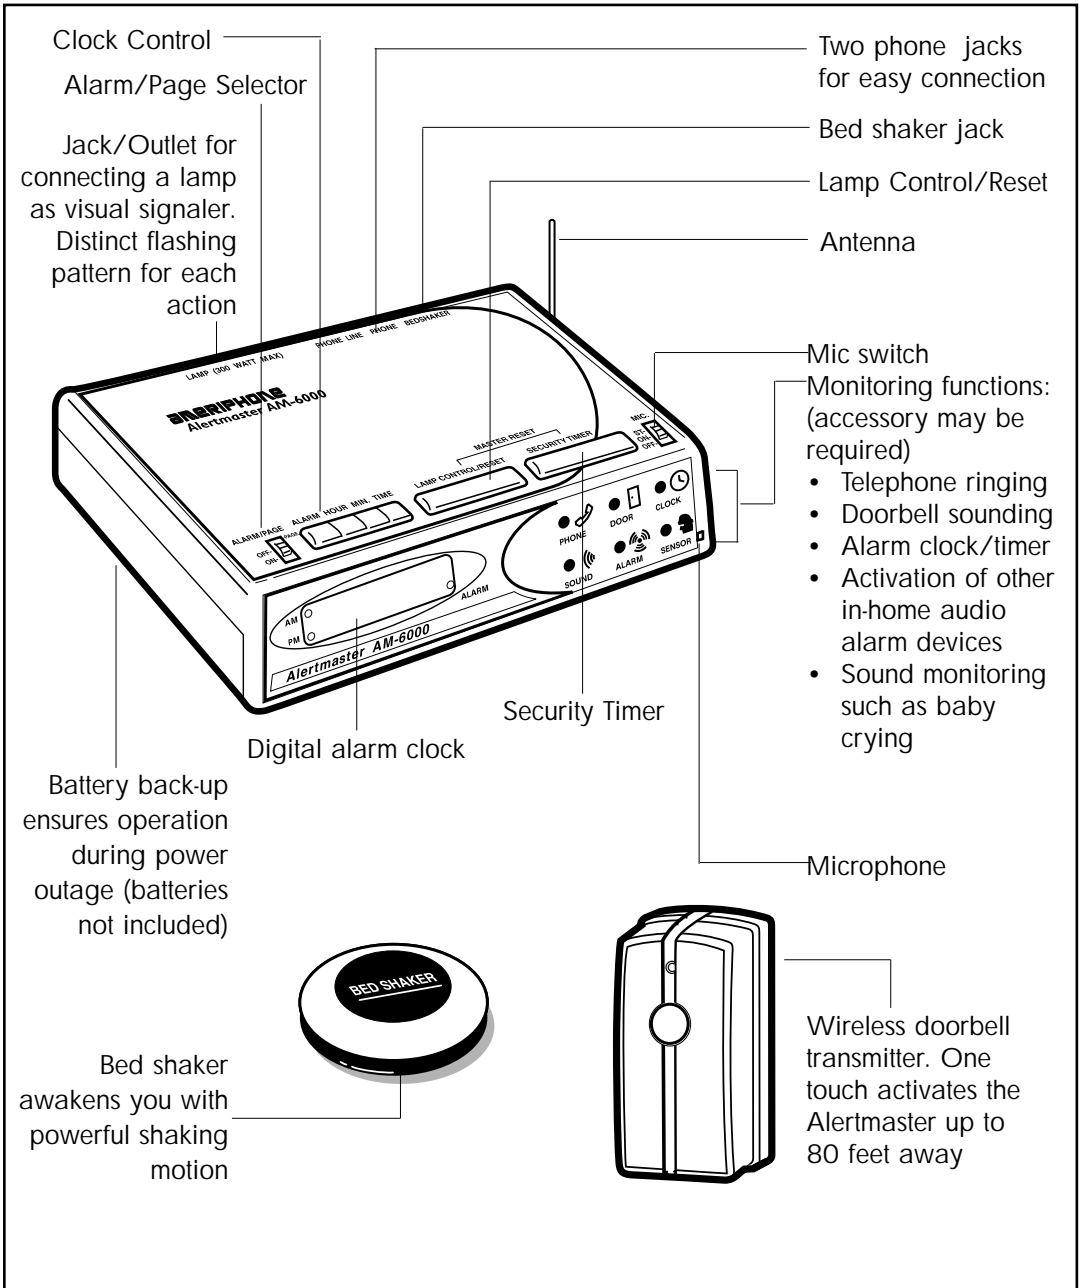


Fig. 2- Features identification for the ALERTMASTER AM-6000




## INSTALLATION AND SET-UP


An ideal location for setting up the base unit is in the bedroom. Do not put any of the Alertmaster components on or next to metal surfaces, computers, television, microwaves, or other areas with electronic equipment that can cause interference to the wireless system.

### A. Base Unit

U.S. and Canada models

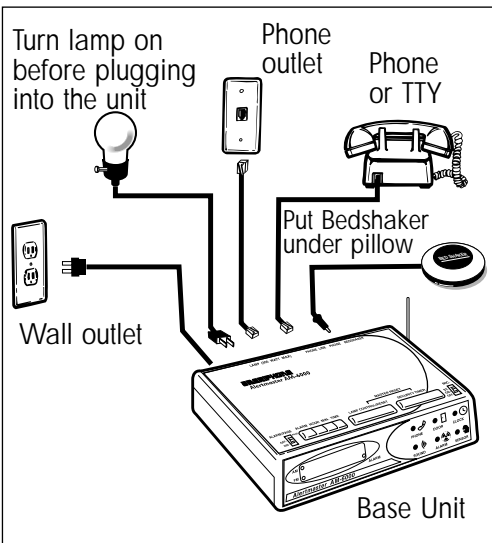

U.K. model

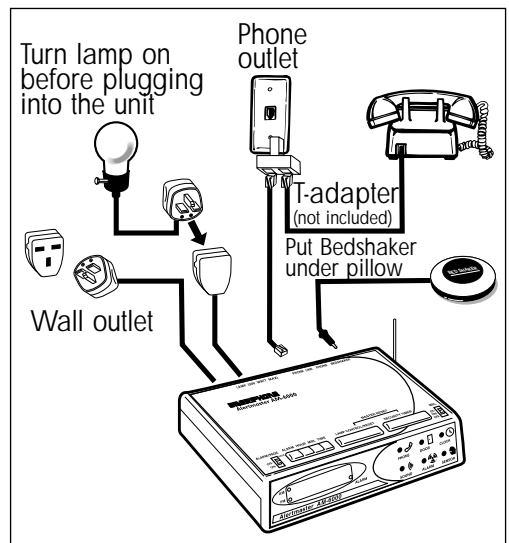

## INSTALLATION AND SET-UP

### B. Doorbell

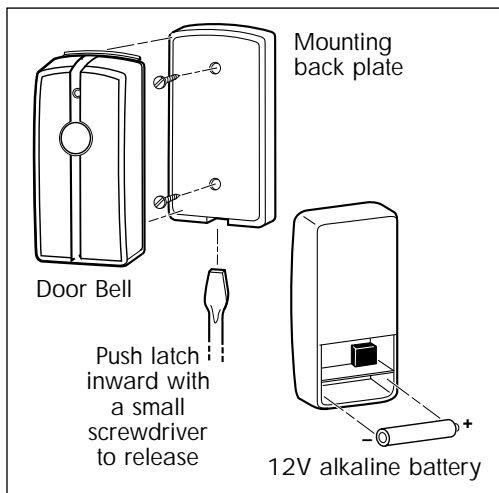


Fig. 4 - Doorbell and battery installation

### C. Clock

1. Press the **Time** and the **Hour** (or **Minute**) buttons simultaneously to change time setting.
2. Press the **Alarm** button to check the alarm setting.
3. Press **Alarm** and **Hour** (or **Minute**) buttons to change alarm clock setting.
4. Use **Alarm/Page** selector switch to turn alarm on or off.


## OPERATIONS

### A. Monitoring Functions

The console has six indicator lights for each of the alerting functions of the Alertmaster AM-6000. Some functions require an optional accessory to be purchased.


Anytime the Alertmaster Notification System is activated by any function(s) the lamp and bed shaker will activate, then stop and reset after 24 seconds, or use the reset button on the console to stop and reset it. The lamp flashes in different patterns for each function.

#### 1. Phone

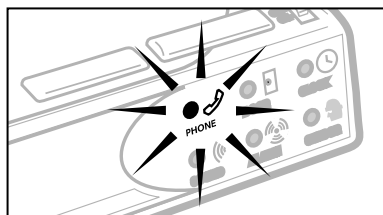


The phone indicator light illuminates when the phone is ringing. The lamp will turn on for two seconds, off for four seconds, and repeat. Answering the phone resets the Phone indicator and any other Alertmaster systems in your home.

## 2. Door

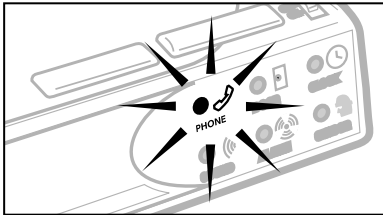

The door indicator light illuminates when the doorbell button is pressed. The lamp will turn on for two seconds, off for two seconds, and repeat. This function is also activated when a signal is received from the optional Door Announcer (Model AM-DX).


## 3. Clock/Paging

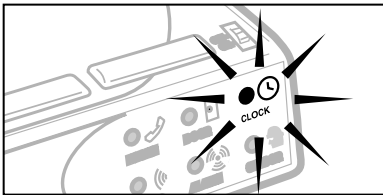

The clock indicator light illuminates when the alarm clock is activated. The bed shaker will vibrate and the lamp will turn on for one second, off for two seconds, and repeat.

## Alarm/Snooze


When the alarm clock activates, the bedshaker will vibrate and the lamp will flash for 24 seconds, or until the **LAMP CONTROL / RESET** button is pushed. When the **LAMP CONTROL / RESET** button is pushed, the bedshaker and lamp will immediately turn off, and then reactivate approximately 5 minutes later, repeating the on/off pattern 16 times, or until the **ALARM / PAGE** selector is moved to the **OFF** position.

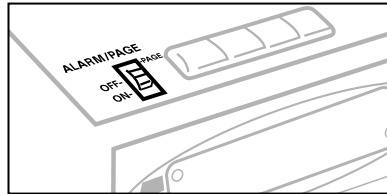

## Paging

When the **ALARM / PAGE** switch is momentarily moved to the **PAGE** position, it activates the base unit and any remote receivers or personal signalers that are within an 80-foot range. They activate for one 24-second cycle. To repeat the page, move the **ALARM / PAGE** switch to **PAGE** again momentarily.


## 4. Sound

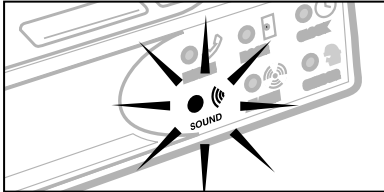

Slide the **MIC** switch to the **ON** position. The sound indicator light illuminates when continuous sound is detected for 12 seconds or longer in the room by the built-in microphone. After another 10 second delay, the lamp will flash on for one second, off for one second, and repeat. This function is also activated when a signal is received from the optional Baby Sound Monitor (AM-BX).

**Note:** The built-in microphone remains **ON** when the **MIC** switch is moved to the **ST** (Security Timer) position. See page 7 for details.

## 5. Alarm

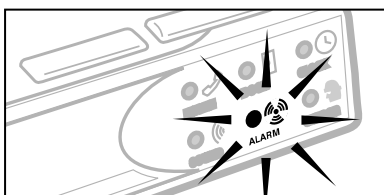

You must purchase the optional Audio Alarm Transmitter (Model AM-AX) from Ameriphone to use this function. When a signal is received from the Audio Alarm Transmitter, the indicator light illuminates, and the lamp will turn on for one second, off for one second, and repeat.

## B. Master Reset

If you have several Alertmaster system components (such as the AM-6000, the AM-100, the AM-RX2 and accessories), you can save time by using the AM-6000 to reset all of them at once. To do this, press the **LAMP CONTROL / RESET** button and the **SECURITY TIMER** button at the same time.

## C. Notification Priority

If the Alertmaster system receives two notification signals at the same time, it will display the highest priority signal. For example, if it receives a Motion Sensor signal right after it receives a Phone signal, the indicator will change from PHONE to SENSOR. The priority for each notification signal is shown as follows:

1. Master Reset
2. Audio Alarm
3. Baby Sound
4. Room Sound
5. Phone
6. Door

7. Paging
8. Alarm Clock
9. Random (Security) Timer

## D. Security Timer

With this feature, the lamp connected to your Alertmaster system will go on automatically every evening and turn off later in the evening. You can use this to make it look like someone is home. The light will turn on and off at slightly different times each evening so it is not so obvious that a timer is being used.

To activate this feature:

1. Set the **MIC** switch to **ST**. The lamp will automatically go on every evening at about 5 PM and turn off at about 11 PM. To confirm this setting, the clock will blink twice every 5 seconds.
  - a. If you want the light to turn on at about 6 PM, press **SECURITY TIMER** once for 2 seconds or more. To confirm this setting, the clock will blink 3 times every 5 seconds.

 
- b. If you want the light to turn on at about 7 PM, press **SECURITY TIMER** twice for 2 seconds or more. To confirm this setting, the clock will blink 4 times every 5 seconds.
- c. To return to 5 PM activation, press the **SECURITY TIMER** button once for 2 seconds or more. To confirm this setting, the clock will blink once every 5 seconds.
- d. If you are home and want to turn off the **SECURITY TIMER** for the evening, press **LAMP CONTROL / RESET** for more than 2 seconds. The timer will resume normal operation the next evening.

**Note:** The microphone remains **ON** when the **MIC** switch is in the **ST** position.

- 2. To turn off the **SECURITY TIMER**, set the **MIC** switch to **ON** or **OFF**

### E. Battery

The Alertmaster AM-6000 operates on ten "AA" size rechargeable nickel cadmium batteries (not included) during a power outage. **DO NOT USE REGULAR BATTERIES!** Power is provided for the console and the pillow shaker, but not for the connected lamp. The clock display is blank when operating on back-up batteries, but correct time will be



maintained. Do not burn or puncture the batteries. Like other batteries of this type, if they are burned or punctured, they could release toxic material which could cause injury. Do not dispose of batteries in household garbage. For information about recycling or proper disposal, consult your local solid waste (garbage) collection or disposal organization. The doorbell transmitter operates on one "23A" size cigarette lighter

battery (included). It normally lasts 6-12 months and can be tested by watching the red power indicator illuminate when the doorbell button is pressed. If the power indicator is faint or off, replace the battery.

## OPTIONAL ACCESSORIES

The Alertmaster AM-6000 is designed to work with optional wireless remote receivers and transmitters, each sold separately.

### A. Remote Receiver (AM-RX2)

Plug the receiver into an AC outlet, and plug in a lamp and you'll be notified wherever the receiver is placed - kitchen, living room, garage, bathroom, etc. It operates up to 80 feet from the Alertmaster AM-6000 base console.



### D. Audio Alarm Transmitter (AM-AX)

Place this next to any audio alarm for notification when the alarm is activated. It activates the Alarm function of the Alertmaster system and has a range of up to 80 feet.



### E. Baby Sound Monitor (AM-BX)

Place this monitor near your infant, and it will transmit a signal to the Alertmaster system when your baby cries.



### F. Door Announcer (AM-DX)

Place the Door Announcer next to your existing door-bell, doorchime, or intercom announcer.



It will transmit a signal activating the Door function of the Alertmaster system from up to 80 feet away. Ideal for apartments, condos or suites with a common security door or gate.



## OPTIONAL ACCESSORIES

### B. Personal Signaler (AM-PX)

Wear this light weight receiver on your belt anywhere around your house and you'll be alerted



to any activity in your home. It has an 80-foot range and a miniature console of indicator lights, and also alerts with different vibrating motions for each function.

### C. Personal Tactile Signaler (AM-PXB)

Similar to AM-PX plus a touch switch for people who are deaf and blind.



## IN CASE OF DIFFICULTY

If any problem should occur during operation of your Alertmaster Notification System, review the "Symptom and Remedy" list below. Make sure no part of the Alertmaster system is on or near metal surfaces or electronic equipment. Should the difficulty persist, contact AMERIPHONE or your authorized dealer for assistance.

SYMPTOM	CAUSE AND REMEDY
Lamp control button doesn't work	Lamp is not turned on prior to plugging it into Alertmaster. Turn the lamp's switch on. Replace bulb if necessary.
Phone rings, lamp doesn't flash	Check all phone line connections. Make sure you can turn the lamp on or off with the lamp control button.
Alarm clock doesn't work	Alarm clock is not turned on. Slide the switch to the <b>ON</b> position.
Bed shaker doesn't vibrate	Bed shaker is unplugged. Plug it in. Coil the wire once around the plastic loop to prevent accidental unplugging.
Room noise doesn't activate	Switch is <b>OFF</b> . Slide it to the <b>ON</b> position. Sound must be continuous for twelve seconds for room noise to activate.
Lamp flashes constantly	There is constant noise in the room, and the sound function is on. Slide the switch to <b>OFF</b> .
Doorbell doesn't work	Dead battery. Depress doorbell button, red light on housing should light up. If not, battery needs to be replaced. If the battery is fully charged, the dipswitches may be incorrectly set. See section on <b>Channel Setting</b> on page 13.

## IN CASE OF DIFFICULTY

### Channel Setting

The Alertmaster System uses special radio signals to communicate between the console unit and all its accessories. For the accessories (Door Announcer, Baby Sound Monitor, Audio Alarm Transmitter and Motion Sensor) to activate the base unit, they all have to be on the same "channel." A "DIP Switch" is used for channel selection.

Your system and all the accessories have been preset in the factory to a standard channel setting. Under normal operating conditions, there is no adjustment necessary.

If your system encounters interference and repeatedly activates itself for no obvious reason, it may be triggered by a system nearby in your neighborhood.

If the interference from another Alertmaster Notification System or other wireless source is present, change channel switch settings on all components.

1. Unplug AC power and locate DIP Switch (a 4-position switch) on the underside of the Alertmaster AM-6000.

2. Open the battery compartment

of the doorbell.

3. Change the switch position of each switch on both units using a ball point pen. All settings need to be identical for the system to work. See Figure 5.
4. Change the switch settings on each of your other accessories (Remote Receiver, Audio Alarm Transmitter, Baby Sound Monitor, etc.) to match the new channel setting.
5. Replace all covers and return accessories to their proper places. Press **LAMP CONTROL / RESET** button once to reset the unit.

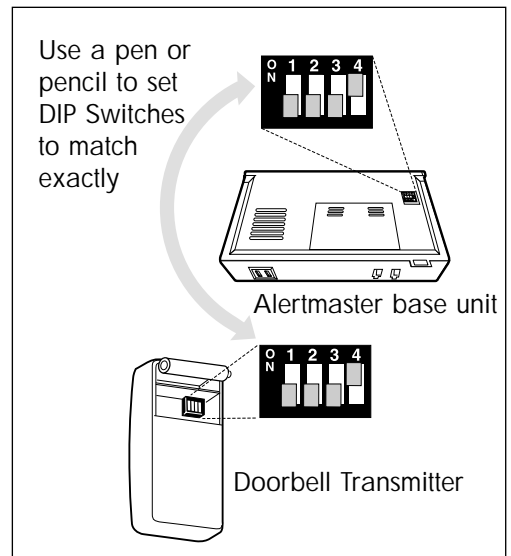


Figure 5 - Channel setting

### Part 68 of FCC Rules Information

This **AM-6000 Notification System** complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug, RJ11 USOC, is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be

connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will

## Regulatory Compliance

be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this telephone equipment, for repair or warranty information, please contact Walker / Ameriphone, 1-800-874-3005. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

This telephone equipment is not intended to be repaired and it contains no repairable parts. Opening the equipment or any attempt to perform repairs will

void the warranty. For service or repairs, call 1-800-874-3005.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this telephone equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone equipment is hearing aid compatible.

### Customer-Owned Coin/Credit Card Phones:

To comply with state tariffs, the telephone company must be given notification prior to connection. In some states, the state public utility commission, public service commission or corporation commission must give prior approval of connection.

### Part 15 of FCC Rules Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Your **AM-6000 Notification System** has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of FCC rules. These limits are

designed to provide reasonable protection against harmful interference in residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

1. Where it can be done safely, reorient the receiving television or radio antenna.
2. To the extent possible, relocate the television, radio or other receiver with respect to the telephone equipment. (This increases the separation

between the telephone equipment and the receiver.)

3. Connect the telephone equipment into an outlet on a circuit different from that to which the television, radio, or other receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

### Industry Canada Technical Specifications

**This product meets the applicable Industry Canada technical specifications.**

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any

repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**CAUTION:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

**The Ringer Equivalence Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any**

**combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.**

[The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.]



# SUPPLIER'S DECLARATION OF CONFORMITY

Issue Date: 09/12/2002

We:

Walker, a division of Plantronics  
12082 Western Ave.  
Garden Grove, CA 92844-2913

Declare that the product:

Description: Alerting Device

Model: AM

Bearing ACTA labeling identification number US:4B5RG08BAM  
(Replaces FCC registration DWWUSA-73204-RG-M)  
to which this Declaration relates is in conformity with  
the following standard/s:

Federal Communications Commission/s **47 CFR Part 68**

The Bases on which Conformity is being declared:

the Administrative Council on Terminal Attachments (ACTA)  
adopted criteria:

**TIA/EIA/IS-968 July 2001**

Additional product information can be found on the Digital  
Loggers website [www.ameriphone.com](http://www.ameriphone.com)

A copy of this statement can be found at [www.sdoc.us](http://www.sdoc.us)

Acknowledgment of this declaration can be found on the ACTA  
Website [www.part68.org](http://www.part68.org)

Related Labeling Information:

AC REN: U,BB

Jack Type: USOC type RJ11

This mark first applied:

Place of Issue:  
Fremont Labs  
42307 Osgood Rd Suite E  
Fremont, CA USA 94539

Issue: 09/12/2002

Name:

Title: VP Quality

Date: 9/5/02

The modem that forms the subject of this guide is approved for use with telecommunications systems run by British Telecommunications, Mercury or Kingston Communications in accordance with the conditions in the instruction for use. The following section provides the statutory information that relates to this approval.

**Model No.:** The unit referred to in this guide as the apparatus is the Ameriphone Alertmaster 2000 / 6000.

**Type of circuits:** The apparatus is approved for connection to telecommunications systems specified in the instructions for use subject to the conditions set out in them. It is not approved for use on a shared service, 1+1 carrier system, or as an extension to a pay telephone.

**Mark of origin:** The apparatus is manufactured in China by Ameriphone. Functions: Call Indicator for the Deaf.

**REN:** The apparatus has a REN of 1.

**Explanation of REN:** Equipment for attachment to the Public Telephone

network is assessed to determine its "ringer equivalence" number (REN). The REN relates to the performance of the apparatus when used in combination with other items of apparatus. The REN is a customer guide indicating approximately the maximum number of items of apparatus that should be connected simultaneously to the line.

To determine the maximum number of items of apparatus that should be connected simultaneously to an exclusive line, the total REN obtained by summing the REN values of each of the items of apparatus connected to the exclusive line should not exceed the maximum REN value of 4. This value includes any BT provided instrument each of which is assumed to have a REN value of 1.0 unless otherwise marked.

The apparatus has a REN of 1 and care must be taken not to use it with other telephone equipment that would result in a maximum figure of 4 REN being exceeded.

Because of the wide spread of ringing detector characteristics, a guarantee of successful operation in an installation of mixed types of

ringing detectors may not be given by the supplier. This apparatus has been approved for use with the following facilities:

\*Ring Indication - 'Bed-shaker and lamp' Any other usage will invalidate the approval of the apparatus if as a result it then ceases to conform to the standard against which the approval was granted.

The connection of the apparatus to an exchange line or PBX extension is via a BT modular socket. If this is not already available please use the form at the end of this chapter to request one from British Telecom. If your PBX was not installed by British Telecom then contact your authorized maintainer.

Approval number:

NS/3979/3/R/604668

This approval applies to the Ameriphone Alertmaster 2000/6000.

### **CAUTION:**

The approval of this apparatus for connection to the British Telecom public switchboard telephone network is **INVALIDATED** if the apparatus is subject to any modification in any material way not authorized by BABT or if it is used

with or connected to:

1. Internal software that has not been formally accepted by BABT.
2. External control software or external control apparatus which causes the operation of the apparatus or associated call set-up equipment to contravene the requirements of the standard set out in BS6305.

All apparatus connected to this apparatus and thereby connected directly or indirectly to the British Telecom public switched telephone network must be approved apparatus as defined in section 22 of the British Telecommunications Act 1984.

### **Mains Lamp Connector**

The 3-pin 240 Vac connector socket is for connection to a domestic 240Vac mains lamp only. It may not be used for any other purpose. The maximum rating for this is 300W.

### **Definition of an RBS**

An RBS, Relevant Branch exchange is defined in BS6789:6.1 1986, section 2.4. There is also a proposed British standard guide for an RBS for PSTN lines.

**ORDER FORM  
FOR U.K. RESIDENTS**

---

If you do not have the correct telephone socket fitted for connection of your Ameriphone Alertmaster 2000/6000, please use the form below and send it to your local area telephone sales office. The address for this office can be found in your local area telephone directory.

To: BRITISH TELECOM PLC

Please supply and fit a new style telephone socket suitable for an Ameriphone Alertmaster 2000/6000 apparatus, approval number:

NS/3979/3/R/604668

The apparatus is fitted with a lead terminated with a 431A type miniature modular telephone plug.

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_

Country: \_\_\_\_\_ Post Code: \_\_\_\_\_

Telephone:(    ) \_\_\_\_\_ FAX: \_\_\_\_\_

Signed: \_\_\_\_\_

Date: \_\_\_\_\_

## WARRANTY

This warranty applies only to AMERIPHONE products that are purchased and used in the United States, Canada, or United Kingdom.

AMERIPHONE warrants the ALERTMASTER AM-6000 against any defect in materials or workmanship for the period of one year from the date of purchase.

If your AMERIPHONE product is defective and returned within 30 days of the date of purchase, your authorized Ameriphone dealer will replace it at no charge.

If returned after 30 days but within one year from the date of purchase, we will repair or replace it at no charge. In the repair of your Alertmaster AM-6000, we may use new or reconditioned replacement parts. If we elect to replace your AM-6000, we may replace it with a new or reconditioned product of the same or similar design. Repair or replacement will be warranted for either 90 days or the remaining time on the original warranty period, whichever is longer.

Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the product is fit for ordinary use), are limited to one year from date of purchase. We will not pay for loss of time, inconvenience, loss of use of your Alertmaster AM-6000 Notification System, or property damage caused by your Alertmaster AM-6000 Notification System or its failure to work, or any other incidental or consequential damages. Some states do not allow limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

To get warranty service for your Alertmaster AM-6000 Notification System, you must provide proof of the purchase date. Within 30 days of the date of purchase, return your Alertmaster AM-6000 to the place where you purchased it for immediate replacement. After 30 days, call AMERIPHONE at 1-800-874-3005 Voice or 1-800-772-2887 TTY/TDD for the authorized service center nearest you. You must prepay all shipping costs. We suggest you save the original packaging materials in the event you need to ship the Alertmaster AM-6000. When shipping for warranty repair, include your name, address, phone number, proof of date of purchase, and a description of the problem. After repairing the product, we will ship it back to you at no cost within the United States.

This warranty does not cover defects resulting from accidents, damage while in transit to our service location, alterations, unauthorized repair, failure to follow instructions, misuse, use outside the United States, Canada, or United Kingdom, fire, flood, and acts of God. Nor do we warrant the product to be compatible with any particular telephone equipment, party line, key telephone systems or more sophisticated switching systems. If your Alertmaster AM-6000 is not covered by this warranty, call us at 800-874-3005 Voice, 800-772-2889 TTY/ TDD for advice as to whether we will repair your Alertmaster AM-6000 and other repair information. The repaired parts shall be warranted for 90 days.

# INDEX

---

Alarm .....	9, 10
Base unit .....	7
Battery Back-up .....	12
Clock .....	8, 9
Doorbell .....	8
Channel setting .....	17
UK Statutory Information .....	24
Installation and set up .....	7
Monitoring functions .....	8
Operations .....	8
Optional accessories .....	14
Audio Alarm Transmitter .....	14
Baby Sound Monitor .....	14
Door Announcer .....	15
Personal Signaler .....	14
Personal Tactile Signaler .....	14
Remote Receiver .....	14
Regulatory Compliance .....	18
Package checklist .....	5
Paging .....	9
Problems - In case of difficulty .....	16
Reset .....	10
Warranty .....	27