

Congratulations on your purchase of the CS-A55 Phone from ClearSounds Communications™. Please read this User Guide carefully in order to get the very best results from your telephone. Keep the manual near the telephone for easy reference.

Please visit our website at www.clearsounds.com to: Register your product, download additional manuals, and review trouble shooting tips.

Due to the nature of VOIP/Broadband technology results may vary when used with VOIP/Broadband service.

Important Safety Instructions

Read and understand the Installation Guide & User Manual. When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to person.

WARNING: Follow all warnings and instructions marked on the telephone.

WARNING: The ClearSounds A55 is capable of amplifying sounds to a loud volume. It is important to instruct all potential users of its proper operation. It is advised to adjust the volume control to the minimum level (Low) when not in use and alert other users that hearing damage can potentially result from misuse.

WARNING: To avoid the possibility of electrical shock, do not use this product near water while in the bathtub or shower or when you are wet. For example, near a bathtub, wash basin, kitchen sink or laundry tub, in a wet basement or near a swimming pool. If the phone becomes submerged in water, do not attempt to retrieve it until after you have unplugged the line cord from the modular wall jack. Do not plug the phone back in until it has dried completely.

WARNING: Avoid using the telephone during electrical storms. There may be a remote risk of electric shock from lightning. If the electrical storm is present in your immediate area, possibility of electrical shock exists.

WARNING: Do not use the phone if you suspect a gas leak in the area. The phone's electrical contacts could create a spark, which could ignite any heavy concentration of leaking gas.

WARNING: Unplug this telephone from wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners on the telephone. Use a damp cloth for cleaning.

WARNING: No telephone should ever be placed near an open radiator or heating register.

WARNING: Occasionally a power surge can occur on electrical lines without warning. With any electrical device that you plug into an outlet, it is suggested you use a surge protector. A surge protector will prevent power surges from damaging your telephone. Surge protectors are simple devices available at your local hardware store.

WARNING: Do not overload wall outlet or extension cords, as this can increase the risk of fire or electrical shock.

WARNING: Never push any objects through the slots in the phone. They can touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.

WARNING: Put this unit securely on a stable surface. Serious damage may result from dropping or the unit falling.

WARNING: Do not cover slots and openings on the unit, they are needed for ventilation and protection against overheating. Never place the unit near hot places where proper ventilation is not provided

WARNING: Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A When the power supply cord or plug is damaged
- B If liquid has been spilled over the unit
- C If the unit has been exposed to rain or water
- D If the unit does not work normally upon following the instructions. Adjust only controls covered by the operating instructions, to avoid expensive repairs by qualified technicians.
- E If the unit has been dropped or damaged
- F If the unit exhibits a distinct change in performance

