

## Universal Sound Signaler USS 360

### OPERATION


The Sonic Alert Universal Sound Signaler model USS 360 is very easy to operate. It will alert you to any important sound – phone, fire alarm, doorbell, kitchen timer, baby, etc. The USS 360 alerts you by flashing a light or lamp “ON and OFF” that is plugged into its “pluglet” as well as in other rooms where Sonic Alert Remote Receivers are located. (Models SA 101, SA 201, RH 100, RH 200, BL 300 and Sonic Boom Alarm clock.

### INSTALLATION

1. Select the lamp you are going to use with the USS 360. Make sure the switch on the lamp is in the “on” position. Check by plugging the lamp into the wall outlet and see light come on.
2. Plug a lamp into the outlet on the cord of the USS 360 as shown on the diagram. The USS 360 is designed for use with incandescent type light bulbs up to 300 watts. Fluorescent type bulbs cannot be used.
3. Plug the USS 360 into any standard electrical outlet.
4. From this point on, only use the button on the USS 360 to turn the lamp on and off. Pressing the button once will turn the lamp ON. Pressing the button again will turn the lamp OFF.
5. A green light under the button will come on whenever the lamp should be on. If the green light is on and the lamp is not on, the lamp is either turned off at the lamp or the bulb needs to be replaced. If you turn the switch on the lamp to the “OFF” position, the lamp will not flash when the USS 360 is activated.
6. If the lamp plugged into the USS 360 is “ON,” It will flash “OFF” and “ON” when a sound is detected. If the lamp is in the “OFF” position, it will flash “ON and “OFF” when a sound is detected.

7. Set the sensitivity by turning the white post, See diagram. Turn post counter clock wise, this is the minimum sensitivity.
8. With the sound source activated (telephone ringing, smoke detector alarming, baby crying, etc.) begin turning the post clock wise until the light starts to flash. This completes the sensitivity setting.
9. The USS 360 will continue flashing the light as long as the sound continues. If the light continues to flash after the sound stops, the sensitivity on the unit should be turned down a little.
10. From time to time you should check the operation of your USS 360 to make sure it’s working. You may need to re-adjust the sensitivity for proper operation.

### Diagram

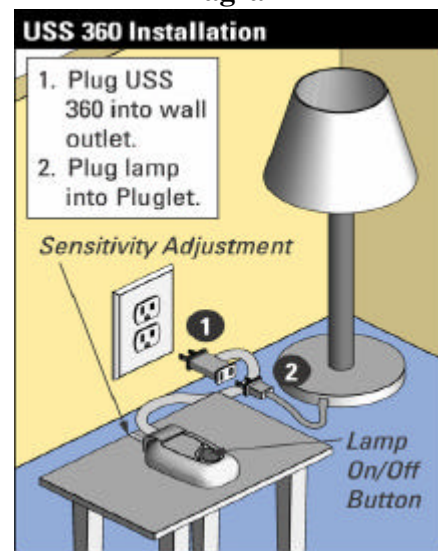

### Sonic Alert's Limited Warranty

**The Adjustable Remote Horn, RH100 is warranted against manufacturing defects in materials and workmanship for 5 years from the date of purchase. Within this period Sonic Alert will repair or replace at our option the RH100 without charge for parts or labor. Simply sent your unit (postpaid) and a copy of your sales proof of purchase to: Sonic Alert, Inc. 1050 East Maple Rd., Troy MI 48083.**

**For Technical and Customer Service**

**Sonic Alert, Inc.**

**248-577-5400**

**e-mail: [sonic-info@sonicalert.com](mailto:sonic-info@sonicalert.com)**

**[www.SonicAlert.com](http://www.SonicAlert.com)**