


SONIC ALERT HA360WRB-II

Quick Setup Guide | Midland WR120 Weather Radio + HomeAware

Use this guide to connect the weather radio to the HA360SA/HA360SA2.1 transmitter and link it to the HomeAware main unit.

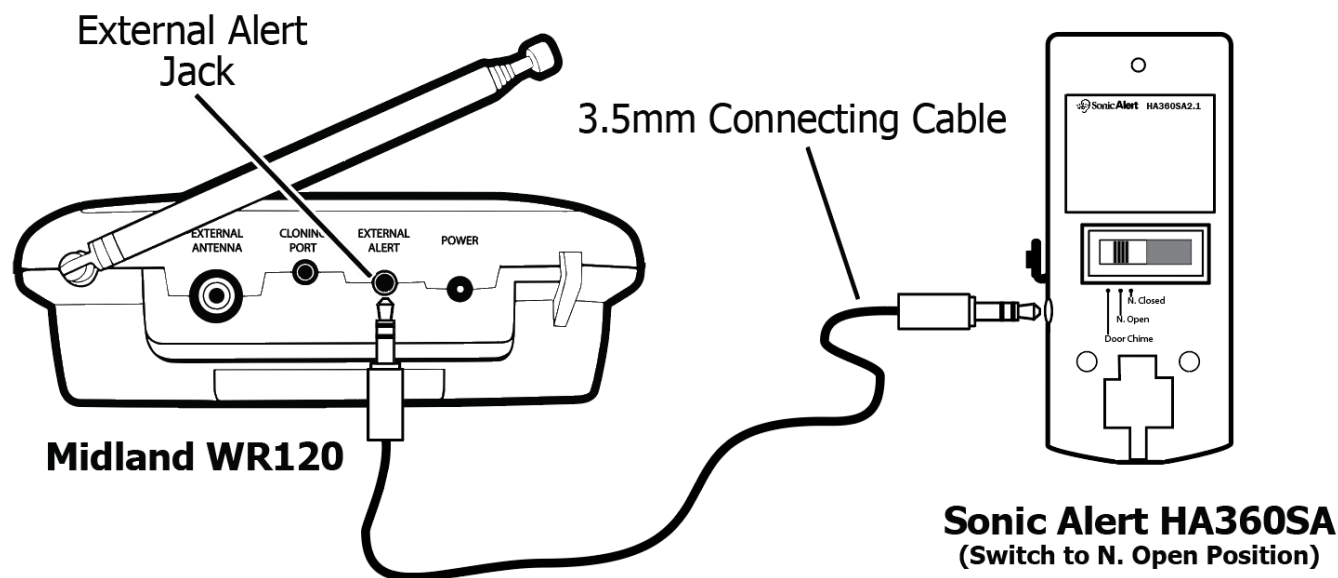

Connection shown: WR120 EXTERNAL ALERT jack to the side jack on the HA360SA using the supplied 3.5 mm cable.

IMPORTANT: Set the HA360SA function switch to N.Open - the center position - before connecting it to the weather radio.

STEP-BY-STEP SETUP

1. Power the equipment.

Connect the HomeAware main unit and Midland WR120 to their power adapters.
Connect the bed shaker to the main unit.

2. Install batteries.

Install three AA alkaline batteries in the WR120.
Open the HA360SA battery door for linking purposes.

3. Program the WR120.

Extend the antenna, turn the radio ON, and complete the on-screen setup for language, location/S.A.M.E. area, time, and weather channel.
Confirm that the selected channel receives a clear broadcast.

4. Connect the 3.5 mm cable.

Insert one end into EXTERNAL ALERT on the back of the WR120.
Insert the other end into the jack on the side of the HA360SA, as shown above.

5. Set the transmitter switch.

Move the HA360SA switch to N.Open (center position).
Do not use N.Closed or Door Chime for this weather-radio connection.

6. Link the HA360SA to HomeAware.

On the main unit, press SET UP; when LINK appears, press ENTER.
Press and release the small LINK button inside the HA360SA battery compartment.
When PICK DEVICE appears, press TONE until STORM is displayed, then press ENTER.
DONE confirms the link.

7. Perform an Alert Test.

Follow instructions in the WR120 Owner's Manual to perform the Alert Test.
Confirm that the HomeAware main unit displays STORM and activates the selected alert outputs.
Close the HA360SA battery door after a successful test.