


Installation and Operating Instructions

Model DB41-MC

Medallion Series Doorbell Transmitter 418MHz

Installation:

1. Locate your doorbell chime unit and remove the cover.
2. Inside the chime unit, locate the terminal block with three terminals marked FRONT, REAR and TRANS.
3. Loosen the two screws but do not disconnect the attached wires.
4. Attach the two wires from the DB41-MC as follows: Red to FRONT, yellow to REAR.
5. Tighten the two screws and tuck and excess wires out of sight. Make sure all wires are clear of the chime mechanism.
6. Replace the chime box cover.
7. Using the supplied Velcro strip, attach the Doorbell transmitter to the wall next to the chime unit or to the chime unit cover. You can also hang the transmitter on a nail or screw using the opening in the back of the case.
8. Other applications are possible. The DB41-MC will activate when it is connected to a source of voltage between 12V and 24V AC or DC.

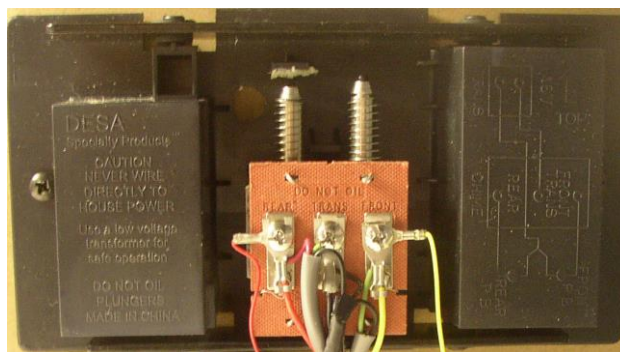

Operation:

1. Whenever the front (or rear, if used) doorbell button is pressed, the chimes will sound as usual, the Red LED on the face of the doorbell transmitter will light up and the transmitter will send a signal to any Silent Call Medallion Series Receiver activating the receiver.
2. Transmission range when using a Silent Call Medallion Series receiver is about 500 ft..
3. Both the front and rear doorbell buttons will activate the doorbell transmitter.
4. This unit is powered by two AA alkaline batteries (included) which will last a year or more depending on use.
5. When the Yellow LED (low battery indicator light) lights up on the face of the transmitter, you will need to change the batteries in the transmitter soon.

Transmitter Settings

The Silent Call Medallion system is digitally encoded. All Silent Call Medallion Series receivers are capable of receiving one million different codes and the transmitters are preset at the factory to send one of the million different codes. Please refer to your receiver manual for instruction on teaching the transmitter code to the receiver.

Installation and Operating Instructions

Model DB41-MC

Medallion Series Doorbell Transmitter 418MHz

Replacement Batteries:

Use two AA 1.5V Alkaline Batteries. AA Batteries may be purchased from local retail stores. Transmitter is shipped with 2 Rayovac Alkaline Batteries Type LR6. Batteries may be purchased Online at www.silentcall.com.

Technical Support

For technical support on this or any other Silent Call product, please feel free to contact us. You can reach us by phone at 800-572-5227 (voice or TTY) or by Email at support@silentcall.com

Limited Warranty

Your transmitter is warranted to be free of defects in material and workmanship for five years from the date of initial purchase. During that time, the unit will be repaired or replaced free of charge when shipped prepaid to Silent Call Communications. This warranty is void if the defect is caused by customer abuse or neglect.



Return for Serving To:

Silent Call Communications

5095 Williams Lake Road, Waterford Michigan 48329

(800) 572-5227 v/tty (248) 673-7360 fax

Website: www.silentcall.com Email: silentcall@silentcall.com