



Sonic Alert

**SONIC RINGER
AUDIBLE TELEPHONE SIGNALER
MODEL TR100**

**SONIC ALERT'S LIMITED
WARRANTY**

The Sonic Ringer Audible Telephone Signaler Model TR100 is warranted against manufacturing defects in materials and workmanship for five (5) years from the date of purchase. Within this period Sonic Alert will repair or replace at our option the TR100 without charge for parts and labor. Simply send the TR100 (postpaid) and a copy of your sales slip as proof of purchase to: Sonic Alert Inc., Attn: Repairs 1050 E. Maple Rd., Troy MI 48083

FCC Information

We designed your telephone signaler to conform to federal regulations, and you can connect it to most phone lines. However, each TR100 (and other device, such as a phone or answering machine) you connect to the phone line draws power. We refer to this power draw as the *ringer equivalence number*, or REN. If you use more than one phone or other device on the phone lines, add up all the REN's. If the total is more than five, Phones might not ring. In rural areas, a total of three might impair ringer operation. If ringer operation is impaired, disconnect a device from the line.

Your TR100 complies with Part 68 of FCC Rules. You must, upon request, provide the FCC registration number and the REN to your local phone company. Both numbers are shown on the TR100's rating label.

In the unlikely event that your TR100 causes problems on the phone line, the phone company can temporarily discontinue service. If this happens, the phone company notifies you of these changes in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

Also, the phone company can make changes to its lines, equipment, or procedures that could affect the operation of this device. The phone company notifies you of these changes in advance, so you can take the necessary steps to prevent interruption of your phone service.

Modifying or tampering with your TR100's internal components can cause a malfunction and invalidate the TR100's warranty and void your FCC authorization to operation it. If the TR100 is not operating as it should, return it to Sonic Alert. If the problem is harming the phone lines, the phone company might ask that you disconnect the TR100 until the problem is resolved.


OPERATION

The model TR100 Sonic Ringer Audible Telephone Signaler Model TR100 alerts you that your telephone is ringing by sounding a loud adjustable horn automatically. The TR100 can flash lights and sound horns in other rooms by use of remote receivers, (Models SA101, SA201, RH100, BL300, Sonic Boom Alarm Clock)

INSTALLATION

1. Plug the modular phone plug at the bottom of the TR100 into a standard modular phone jack. (Use Jack type USOC RJ11C) the seven-foot cord is long enough to accommodate a variety of phone locations. However if the phone outlet is further away from the electrical outlet and you need a longer telephone line extension lines are available at Radio Shack or hardware stores.
2. Plug the TR100 into any standard electrical outlet.
3. Adjust the volume with the wheel on the left side.
4. Adjust the tone with the wheel on the right hand side.
5. To use with Remote Receivers (Model SA101, SA201, RH100, BL300 or SB1000), simply plug receiver into an electrical outlet and plug a lamp into the outlet located on the receiver, model SA101, SA201. For RH100 and BL300 simply plug into the electrical outlet, also works with SB1000 Sonic Boom Alarm Clock.

**TR100 Sonic Ringer
Audible Telephone Signaler**

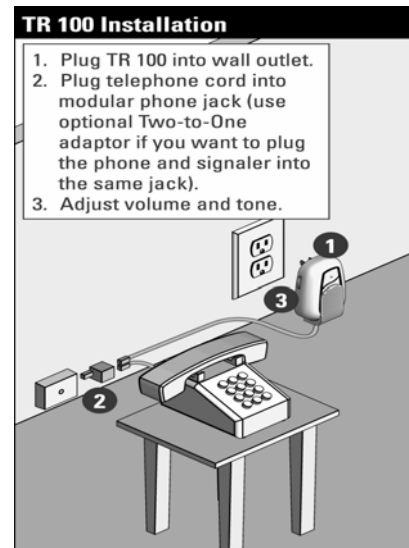

MADE IN CHINA

1050 East Maple Rd, Troy MI 48083 (248)577-5400

www.SonicAlert.com