



# PowerTel 58

## User Guide



Set up .....	6	Help and support .....	33
Calling functions .....	9	Troubleshooting guide .....	33
Menu options .....	12	Technical details .....	35
Phone book .....	16	Default settings .....	36
Using the answering machine.....	24	Maintenance and warranty .....	37

## FCC Compliance

The FCC requires that you will be advised of certain requirements involving the use of this telephone.

1. This equipment complies with Part 68 of the FCC rules. A label on the base unit of this equipment contains, among other information, the ACTA Registration Number (US:AAAEQ#TXXXX) and the Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company.
2. An applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment.
3. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
4. The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your number is called. In most, but not all areas, the sum of the REN of all devices should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should call your local telephone company to determine the maximum REN for your calling area.

**NOTICE:** If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.


5. If your telephone causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.
6. Your telephone company may make changes to its facilities, equipment, operations or procedures that could affect the proper operation of your equipment. If they do, you will be given advance notice so as to give you an opportunity to maintain uninterrupted service.
7. If you experience trouble with the telephone, please contact the Amplicom Service Center at 1-866-AMPLICOM (267-5426) for repair/warranty information. The telephone company may ask you to disconnect this equipment from the network until the problem have been corrected or you are sure that the equipment is not malfunctioning.
8. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. (Contact your state public utility commission or corporation commission for information.)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone. Changes or modifications not expressly approved in writing by Amplicom may void the user's authority to operate this equipment.

Some cordless phones operate at frequencies that may cause interference to nearby TVs and VCRs; to minimize or prevent such interference, the base of the cordless phone should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio TV technician for help.

# PowerTel 58 corded phone base

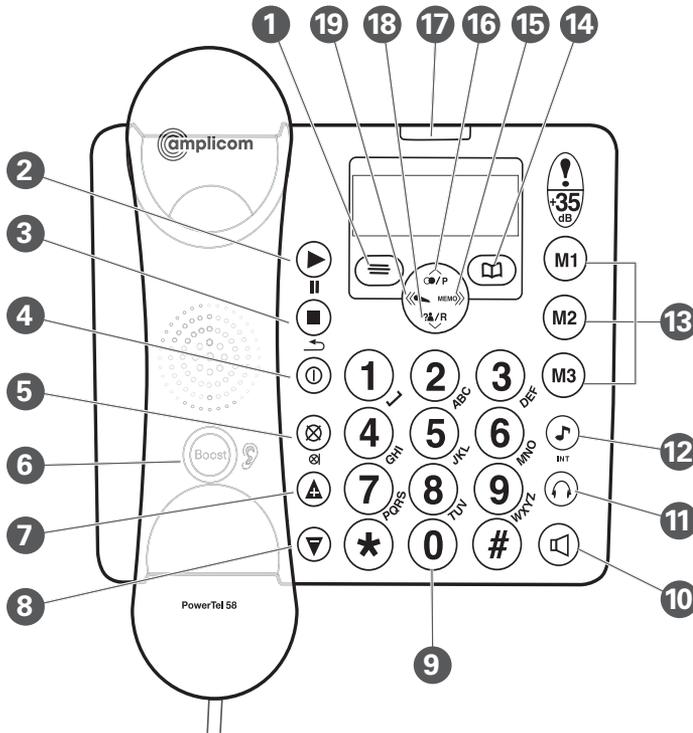

- 1 Menu/OK
- 2 Play/Pause
- 3 Stop/Esc
- 4 Answer on/off
- 5 Mute/Delete
- 6 Boost (under handset)
- 7 Volume up
- 8 Volume down
- 9 Keypad
- 10 Handsfree
- 11 Headset
- 12 Equalizer
- 13 Quick dial memories/ User profiles
- 14 Phonebook
- 15 Fast forward/ Memo
- 16 Up/Redial/ Pause
- 17 Incoming call light/ New messages received
- 18 Down/Calls list/Recall
- 19 Rewind/ OGM



**Warning:** This Handset has been specially designed for individuals who are hard of hearing and has a normal volume which is louder than a standard phone. Use of the Boost feature can cause hearing damage to individuals who are not experiencing hearing loss.

## Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Do not use the telephone to report a gas leak in the vicinity of the leak.
3. Use only the power cord indicated in this manual.
4. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

### SAVE THESE INSTRUCTIONS

#### Intended use

This phone is suitable for use on a public telephone network. Any other use is considered unintended use. Unauthorized modification or reconstruction is not permitted. **Do not** open the device and attempt any repair work yourself.

## Phone location

Locate corded phone:

- On a dry, flat and stable surface
- Where the power cable will not be a trip hazard
- Where it is not obstructed by furniture
- At least three feet from other electrical appliances
- Away from smoke, dust, vibration, chemicals, moisture, heat or direct sunlight.

## Medical equipment

Do not use the phone near emergency or intensive care medical equipment, or during an electrical storm. If you have a pacemaker check with a medical expert before using this product.

## Hearing aid compatibility

This phone works with most popular hearing aids. However, given the wide range of hearing aids available, the phone may not function fully with every hearing aid.

Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.



**Important: The phone will produce high volume when Boost is switched on.**


## Getting Started — Included Equipment

- 1 Corded Phone Base, Handset and Answering Machine
- 1 Power Adapter
- 1 Telephone Cable

## Set up

### Connect phone base

1. Plug the power adapter into the back of the corded phone base and the other end into a wall socket. Turn the power on.
2. Plug the telephone cable into the back of the corded phone base and the other end into the phone wall jack.
3. Plug one end of the handset cable into the handset and the other end into the side of the base.

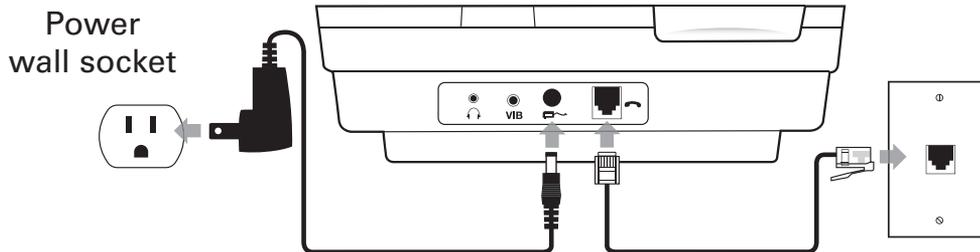

**The telephone is now ready for use!**

**Important: Use only Power supply model S008CU1200067 supplied by Ten Pao Industrial Co., Ltd. for Base unit.**

## Corded Phone Handset Display Icons

The following icons can appear in the handset display:



Phone book mode



Ringer off



Handsfree mode



Call in progress



Boost receiver volume is on (Icon will flash)



Handset microphone is muted



You have new calls



New calls in the calls list



Old calls in the calls list

## Phone Menu and Display Guide

The phone menu display allows access to the phone's functionality.

**Open main menu:** Press .

**Browse sub menu:** Open the main menu and then press /P or /R.

**Select sub menu item:** Scroll using /P or /R until the menu item desired is highlighted and press .

**Browse a function:** Open the sub menu and press /P or /R.

**Select a function:** Scroll using /P or /R until the required function is highlighted and press .

**Enter digits or letters:** Use the keypad.

**Confirm or save an entry or action:** Press .

**Cancel and return to standby:** Press .

**Note:** After 20 seconds, the phone will go into standby mode unless a button is pressed.

# Calling Functions

## Make a call

1. Enter the phone number.
2. Press  to delete a mistaken entry.
3. Dial the number by picking up the handset or by pressing .

## End a call

Return the corded phone to its base.

## Answer a call

1. Lift the handset off the base or press  on the corded handset.

## Redial a number

The phone stores the last 5 numbers dialed.

1. Open the redial list by pressing .
2. Scroll through the redial list using  or  until the desired number to redial is highlighted.
3. To dial the number lift the handset or press  to dial in handsfree mode.

**Note: Each phone number will be announced from the redial list provided the Read Number feature is enabled. See page 13 for details.**

## Call back a previous caller

The phone stores the last 30 incoming phone numbers.

1. Open the incoming calls list by pressing .
2. Scroll to find the desired number using   / **P** or , and pick up the handset.

## Dial a number in the phone book

1. Open the phone book by pressing .
2. Scroll to find the desired number using   / **P** or , pick up the handset.

## Dial a number using the quick dial buttons

1. Choose a quick dial number by pressing ,  or .
2. Pick up the handset to dial the number.

## Adjust the handset earpiece volume

Note: The handset earpiece volume is louder than a standard phone.

To adjust the volume during a call, adjust the setting with volume buttons  or .

## Boost the handset earpiece volume

To boost the handset earpiece volume during a call, press . An image of an ear will flash in the display and the light on the top of the base will be lit to show that boost is on.

## Handsfree feature

Use the handsfree feature to talk to the caller without holding the handset or to let other people in the room listen to the conversation.

Switch on handsfree mode by pressing . To adjust handsfree volume, press  or  (there are 5 levels).

## Use a headset (not included)

Plug a headset into the  socket on the back of the base and press .

For servicing or replacement, you can purchase a headset with model no. NL100 through the service center or your retailer.

## Mute the phone

Muting the phone during a call will silence the mouthpiece on the phone so it does not transmit any noise to parties on the other end of the line.

To switch off the mouthpiece, press . **Mute** will be displayed.

To switch it on again, press . The display will show **Unmute**.

## Switch ringer on and off

1. Press , scroll to highlight ringer tone with /P or /R, and press .
2. Scroll using /P or /R to highlight volume, then press .
3. Scroll using /P or /R to highlight ring off, then press .

# Menu Options

## User Profiles

The phone can store 3 different user profiles with different settings for the Volume, Boost and Equalizer features. Each Profile can be given a personalized name.

### Change a profile name

1. Open the menu by pressing , then scroll using /P or /R to highlight **Profile**. Then press .
2. Scroll using /P or /R to highlight **Profile 1, 2, or 3**. Then, press .
3. Scroll using /P or /R to highlight **Name**. Then, press .
4. Press  to delete current name.
5. Enter a new name (up to ten letters). Then, press .

### Change a profile's handset Volume or Equalizer

1. Press , then scroll using /P or /R to highlight **Profile** and press  again.
2. Scroll using /P or /R to highlight **Profile 1, 2, or 3**. Then, press .
3. Scroll using /P or /R until the desired setting (Volume, Boost, or Equalizer) is highlighted. Press .

## Changing Menu Settings

**Ringer melody** — There are ten ringer melodies.

**Ringer volume** — There are five volume levels plus **Off**.

**Base key tone** — Pressing a button makes a key tone sound if On.

**Base display contrast** — There are five contrast levels.

**Base display language** — There are six languages: **English, German, French, Spanish, Dutch and Italian.**

**Remember boost** — When this feature is set to ON, pressing  causes the handset to remember and use the last boost setting for all calls.

**Read number** — With this feature set to **On**, each number is announced when someone: enters a phone number, presses a quick dial button, scrolls through entries in the phonebook redial list, or accesses a call list.

**Change case** — Changes the case setting on the display.

### Changing Settings:

1. Open menu by pressing , then scroll using /P or /?/R to highlight change case and press .
2. The current setting will be displayed.
3. Change the setting using /P or /?/R and press .

## Change date/time

1. Open menu by pressing , then scroll using /P or /R to highlight the desired menu setting (see above) and press .
2. Scroll using /P or /R to highlight **Date & Time** and press .
3. Enter the month, day, and year and press .
4. Enter the hours (the handset has a 24-hour clock) and press .

## Change clock hours to 12- or 24-hour format display

1. Open menu by pressing , then scroll using /P or /R to highlight **Time**. Press  again.
2. Scroll using /P or /R until you highlight **Format** and press .
3. The display will show the current time format setting (e.g. **24 hour**).
4. Change the time format using /P or /R and press .

## Reset to default settings

It is easy to reset your handset to its default settings.

**Note: Doing this will delete the phone book, calls and redial lists and any answering machine messages.**

1. Open the menu by pressing , then scroll using  or  to highlight **Reset**. Press  again.
2. The display will show **PIN:\_\_\_\_\_ (Default0000)**. Press  to confirm or  to cancel.

## Phone book

Up to 200 names with phone numbers can be alphabetically stored in the phone book. To quickly find a phone book entry, simply enter the first letter of a stored name.

**Note: Each phone book entry allows for up to 16 letters for any name and up to 24 digits for any phone number.**

**Important: Enter the area code for each phone number in the phone book**

## Keypad use for phone book

The keypad contains alpha-numeric keys. Pressing one key multiple times will scroll through the available letters and numbers which that key represents.

Other useful keys:

- Press **1** for a space
- Press  to delete a number or letter
- Press **0** or **1** for certain special characters
- Press  to change to upper and lower case

**Note: To enter the same letter twice, enter the letter and then pause until the cursor moves to the next space before entering it again.**

## Enter a name and number in the phone book

1. Press and hold  for 2 seconds until the display shows **Enter Name** and a flashing cursor.
2. Use the keypad to enter the name to be stored. Then, press .
3. Enter the phone number to be stored. Then, press .
4. Scroll using  or  to choose a ringer melody for this name and number. Press . The display will show **Saved**.

## Edit a phone book entry

1. Press .
2. Scroll using  or  to find the entry to edit.
3. Open options by pressing , then scroll using  or  to highlight **Edit**. Press .
4. Edit the name using  or **MEMO** to move the cursor, enter the new letters, and press .
5. Edit the phone number using  or **MEMO** to move the cursor, enter the new digits, and press .
6. Scroll using  or  to choose a ringer melody for this name and number

and press . The display will show **Saved**.

## Delete a phone book entry

1. Press .
2. Scroll using  or  to find the entry to delete.
3. Open options by pressing , then scroll using  or  to highlight **Delete**, and press .
4. The display will show the **Delete?** Press  to confirm the deletion or  to cancel.

## Delete all phone book entries

1. Press .
2. Open options by pressing , then scroll using  or  to highlight **Delete All**, and press .
3. The display will show **Delete All?** Press  to confirm the deletion or  to cancel.

## Using quick dial memory

A phone can store a name (max. 16 characters) and telephone number (max. 24 digits) under each of its quick dial memory buttons: **M1**, **M2** and **M3**.

## Store a quick dial name and number

1. Choose the quick dial button under which to store a name and number by pressing either **M1**, **M2** or **M3** and press .
2. Press **M1**, **M2** or **M3** and press .
3. Enter the name to store and press .
4. Enter the phone number to store and press .
5. Scroll /P or ?/R  to choose a ringer melody for this name and number and press . The display shows **Saved**.

## Edit a quick dial entry

1. Choose the quick dial entry to edit by pressing either **M1**, **M2** or **M3**.
2. Press . **Edit** is displayed, press  again.
3. Use  or **MEMO**  to move the cursor, enter the new letters. Press .

4. Use  or MEMO  to move the cursor, enter the new digits, and press .
5. Scroll using  or  to choose a ringer melody for this name and number and press . The display will show **Saved**.

## Delete a quick dial entry

1. Choose the quick dial entry to delete by pressing either ,  or .
2. Press . Press /R  to highlight **Delete** and press .
3. The display will show **Delete?** Press  to confirm or  to cancel.

## Change case

1. Change to upper or lower case in the phone book input name by pressing  button.

## Incoming Calls

**Note: You must subscribe to your phone service provider's Caller Display/ Caller ID service for this feature to work.**

Incoming call telephone numbers will appear in the calls list. If the caller's number is stored in the phonebook, the name will be displayed instead. A total of 30 incoming calls can be stored in the calls list (16 letters per name and 24 digits per number). The number of new calls received will be shown in the display with the flashing  icon. If the number does not appear, the caller's identification (Call Line ID) has been withheld by the caller.

Open and view the calls list by pressing . To scroll through the calls list, press  or . Other displayed information:

- **WITHHELD NUMBER** – withheld number, or ID information isn't available
- **INTERNATIONAL** – call is from another country or using an internet service
- **PAYPHONE** – caller is calling from a public payphone

**Store numbers from a calls list to the phonebook or quick**

## dial memory (M1, M2, M3)

To store incoming call numbers to your phone book or quick dial list:

1. Press  to open the calls list at the most recent entry.
2. Scroll using  or  to find the entry to store.
3. Open options by pressing , then scroll using  or  to highlight **Save to PB** or **M1**, **M2** or **M3**, and press .
4. Enter a name for this stored number and press .
5. Edit the number for this name, if necessary, and press .
6. Scroll using  or  to choose a ringer melody for the entry and press .

## Delete a single calls list entry

1. Press  to open a calls list at the most recent entry.
2. Scroll using  or  to find the entry to delete.
3. Open options by pressing  and then scroll using  or  to highlight **Delete**, and press .
4. The display will show **Delete?** Press  to confirm or  to cancel.

## Delete all calls list entries

1. Press /R to open a calls list at the most recent entry.
2. Press , and then scroll using  or  to highlight **Delete All**. Press .
3. The display will show **Delete All?** Press  to confirm or  to cancel.

## Using the answering machine

After setting up the phone system, use the following steps to set up and use the answering machine.

### Switch answering machine on or off

Press  to turn the answering machine off and on.

The current answer mode will be announced.

When new messages are received, the message counter on the base and the base indicator light flash. The message counter also indicates the number of messages.

### Set the language

Choose the answering machine voice prompt language: English, Spanish or French.

1. Press and hold  twice.
2. Scroll using  or  to highlight **Language** and press .
3. Choose the language using  or  and press .

### Set the answer mode

Choose the answer mode: Answer & Record or Answer only. With the machine in Answer only mode, callers will not be able to leave a message.

1. Press  to switch the answering machine on.
2. To change the mode between **Answer & Record**, **Answer Only** or **Answer Off**, press and hold  for two seconds.

## Check the outgoing message

Press  to hear the current outgoing message.

## Record an outgoing message

The outgoing message must be less than two minutes long. To change the default answering message:

1. Press and hold  on the base for two seconds. Record the new message after the beep.
2. To stop recording, press . To listen to the recorded message, press  .

**Note:** to return to the default message, press and hold  while the outgoing message is playing.

## Set the answer delay

Choose the number of times the phone will ring before the answering machine answers an incoming call. Or, choose Time Saver, if no one will be available to answer the phone. Time Saver is useful if someone will be calling in from a different phone to listen to messages: if the machine answers after 2 rings, there are new messages to listen to. If it answers after 5 rings, there are no new messages. This feature gives the option of hanging up after 3 rings (because there are no new messages) to save time and avoid being charged for the call.

1. Press  twice.
2. Scroll using  or  to highlight **Answer Delay**. Press .
3. The display will show the current answer delay setting (e.g. **5** rings).
4. Choose the number of desired rings (2–9) or Time Saver using  or , and press .

## Record a memo

Memo messages can be played back like normal messages.

1. Press and hold **MEMO**  for two seconds.
2. After the beep, record the memo.
3. Press  to stop recording.

## Listen to messages or memos using the corded phone

Messages and memos are played in reverse order, with newer messages played first. The time and date of each message or memo is announced before playback.

Use the following buttons to control message playback:

- To play or pause, press 
- To stop, press 
- To rewind, press 
- To fast forward, press **MEMO** 

## Delete a single message or memo

1. Press  to play a message or memo.
2. To delete it, press and hold  during playback.

## Delete all messages and memos

1. Press  twice.
2. Scroll using  or  to highlight **Del. All Msgs**. Press .
3. The display will show **Delete All?**
4. To confirm, press . Or to cancel, press .

## **Memory full**

When the memory is full, the answering machine announces that fact, automatically stops taking more messages, and switches to **Answer Only** mode. Some existing messages or memos must be deleted before any new messages can be recorded.

## **Access the answering machine from a remote location**

Messages on the answering machine can be listened to from other phones, including mobile phones.

A PIN (Personal Identification Number) code is required to access the answering machine. The default code is **000**. Change the PIN code to keep messages secure.

## Change PIN

1. Press  twice, then scroll using /P or /R to highlight **Remote PIN**, and press .
2. Enter the old PIN, and press . The default PIN is 000.
3. Enter the new PIN, and press .
4. Enter the new PIN a second time, and press .

## Call in to check messages

1. Dial the system's phone number from a remote phone and wait until the answering machine picks up the call.
2. Press  twice, then enter the 3 digit PIN after the voice prompt.
3. Refer to the next section, "Manage messages from another phone" for additional instructions.

**Note: if the wrong PIN is entered three times, the answering machine will hang up, and it will be necessary to call again and enter the correct PIN.**

## Manage messages using another phone

Use these numbers to manage messages from a remote location.

**Press...**

**1 to Rewind**

**2 to Play or Pause your messages**

**3 to Fast Forward** through your messages

**4 to Hear the outgoing message**

**5 to Record outgoing message (6 to stop recording)**

**6 to Stop messages**

**7 to Delete current message**

**8 to Turn OFF** answering machine

**9 to Turn ON** answering machine

**0 to Delete all** old messages

**# to Record a memo (6 to stop recording)**

## Use on a private branch exchange

If the phone is on an exchange (e.g. dial 9 to get an outside line), calls can be transferred or called back by using the **R** button. Check with the system administrator for system set-up and instructions. Private exchanges are normally used in a business-setting.

### To set recall time

1. Open your menu by pressing , then scroll using /P or /R to highlight **Settings** and press .
2. Scroll using /P or /R to highlight **Recall** and press .
3. The current recall timing setting (e.g. **Short**) will be displayed.
4. Choose the desired recall time setting (Short or Long) using /P or /R and press .

### Insert a dialing pause

Insert a pause before the dial tone if the system requires an outside line which takes awhile to connect.

To insert a dialing pause using your corded phone, enter the number to reach the outside line and then press /P. A **P** on your display will show dialing pause is active.

**Note: A dialing pause can be used with a phone number in the phone book.**

## Set the dial mode

There is a choice of two dialing modes: tone and pulse. The default setting is **TONE** and this is the correct setting for use within the United States.

### To change dial mode using the corded phone

1. Press , then scroll using /P or /?/R to highlight **Settings** and press .
2. Scroll using /P or /?/R to highlight **Dial Mode** and press .
3. The current dial mode setting (e.g. **Tone**) will be displayed.
4. Choose the desired dial mode setting (Tone or Pulse) using /P or /?/R and press .

# Help and support

## Troubleshooting guide

### I can't make phone calls

1. Make sure the phone cable is connected properly. Make sure you are using the phone cable that came with your phone.
2. Make sure the base is plugged in, switched on and working.
3. Test the phone line and socket by using another phone.

### The phone system isn't responding

You may need to reset to default settings. Please see page 38.

### Answering machine won't record messages or memos

1. Check that the answering machine is connected and switched on.
2. Answering memory may be full. See page 28.

### Caller's identification (Call Line ID) isn't working

1. Check that you have this service on your phone line. Please call your network provider.
2. The caller may have withheld their phone number.

## **My base doesn't ring**

Check that the ringer is on.

## **There is interference in the earpiece and/or internet connection is very slow when using the phone**

You must plug the phone into the wall socket via an ADSL filter if you have broadband internet on your phone line.

## **The white light on the base is constantly flashing**

You have new answering machine message(s). Press  to listen to them and the flashing will stop. My answering machine won't record messages or memos

1. Check that your answering machine is connected and switched on.
2. Answering memory may be full. See page 28.

## **My remote access isn't working**

1. Check you're using the correct PIN. See page 29.
2. Make sure you're using a touchtone phone.

## Energy efficient power adapter

The included power adapter meets the eco-design requirements of the European Union (Directive 2005/32/EG).



## Disposal

The  symbol on this product indicates that electrical and electronic apparatus and battery pack must be disposed of **separately** from domestic waste at suitable collection points provided by the public waste authorities.

## Technical details

<b>Power supply (base station)</b>	Input: 100-240V~50/60Hz 250mA Output: 12VDC 670mA
<b>Dialing mode</b>	Tone (DTMF) Pulse
<b>Optimum ambient temperature</b>	32°F to 113°F (0°C to 45°C)
<b>Optimum relative humidity</b>	20% to 80%
<b>Recall</b>	300, 600 ms

## Default settings

Language	English
Answer mode	Answer and Record
PIN code for remote access	000
Answer delay	5
Time format	24 Hour
External memory	8
Ring volume	5
Key tone	On
Contrast	4
Boost memory	Off
Shaker	On
Recall time	600ms
Dialing mode	Tone

# Maintenance and Warranty

## Maintenance

- Please clean your equipment's surfaces with a soft, lint-free cloth.
- Never use cleaning agents or solvents.

## Warranty

AMPLICOM equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble free functioning and a long service life. The terms of the warranty do not apply where the cause of the equipment malfunction is the fault of the telephone network operator or any interposed private branch extension system. The terms of the warranty do not apply to the rechargeable battery pack or power packs used in the products. The period of warranty is 24 months from the date of purchase.

All deficiencies resulting from material of production faults which occur during the period of warranty will be eliminated free of charge. Rights to claims under the terms of warranty are annulled following intervention by the purchaser or third parties. Damage caused as a result of improper handling or operation, incorrect positioning or storing, improper connection or installation, Acts of God or other external influence are not covered by the terms of warranty.

In the case of complaints, we reserve the right to repair or replace defect parts or provide a replacement device. Replacement parts or devices become

our property.

Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your equipment shows signs of defect during the period of warranty, please return to the sales outlet in which you purchased the AMPLICOM equipment together with the purchase receipt. All rights to claims under the terms of warranty in accordance with this agreement must be asserted exclusively with regard to your sales outlet.

Two years after the purchase of our products, claims under the terms of warranty can no longer be asserted.

## Declaration of conformity

The ETL Listed Mark is an alternative to the CSA and UL marks. ETL Testing Laboratories owned by Intertek Testing Services (ITS) is recognized by OSHA as a Nationally Recognized Testing Laboratory (NRTL). ITS tests products according to nearly 200 safety and performance standards. The ETL Listed Mark is accepted throughout the United States when denoting compliance with nationally recognized standards such as ANSI, IEC, UL, and CSA.



This certification mark indicates that the product has been tested to and has met the minimum requirements of a widely recognized (consensus) U.S. product safety standard, that the manufacturing site has been audited, and that the applicant has agreed to a program of periodic factory follow-up inspections to verify continued conformance. our property.

**A**

Adjusting the handsfree volume 11  
Adjusting the earpiece volume 10  
Answering machine 24-30

**B**

Base ringer melody 13  
Base ringer volume 13  
Base settings 12  
Boost memory 13  
Boosting the earpiece volume 13

**C**

Changing the system's PIN code 29  
Change case 13, 16  
Checking messages 25  
Check the contents of the box 6

**D**

Date/time 14  
Default settings 36  
Dial mode 32  
Dialing pause 31  
Dialing from the phone book 16  
Display icons 7

Display calls list entries 21

**E**

Earpiece volume 10  
End a call 9  
Entering names in the phonebook 17  
Equalizer 12

**H**

Handset name 32  
Handset ringer melody 13  
Handset ringer on/off 11  
Handset ringer volume 10  
Handsfree 11  
Headset use 11

**L**

Language 13

**M**

Making a call 9  
Memory full 28  
Mute 11

**P**

Phone book 16-20

Profiles 12-14

**Q**

Quick dial 10

**R**

Record outgoing message 25

Redial 9

Remotely checking messages 29

**T**

Tone control (see Equalizer)

**U**

Using a headset 11

Using the menu 12

**V**

Volume 10-13