

Wireless Chime with Strobe Light

MODEL: LA-204WH

MOUNTING THE PUSHBUTTON TRANSMITTER

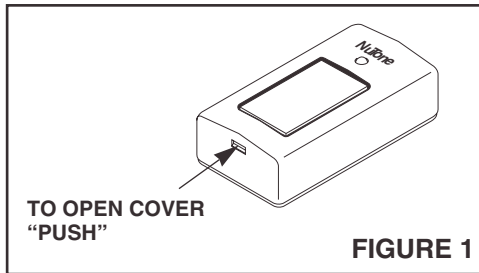


FIGURE 1

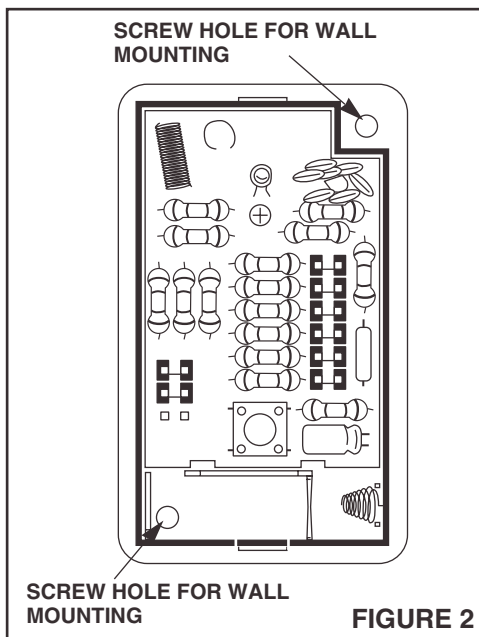


FIGURE 2

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference; and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Refer to Figures 1 and 2.

1. Locate the Pushbutton next to or near the door.

Do not mount the pushbutton on a metal surface.

2. Remove the Pushbutton cover by inserting the tip of a screwdriver in the slot at the bottom of the Pushbutton and then gently rock the Pushbutton cover apart from the Pushbutton base.
3. Choose a level place to locate the Pushbutton base.
4. Position the Pushbutton base, and mark the mounting surface with a pencil through the two holes in the Pushbutton.
5. Drill two $\frac{3}{16}$ " diameter holes at the previously marked area.
6. Insert the plastic anchors into the $\frac{3}{16}$ " diameter holes.
7. Place Pushbutton over anchors, and fasten with two screws provided. Do not replace cover at this time.

PUSHBUTTON SOUND CODING

Refer to Figure 3.

1. The Receiver strobe light will flash with any chime sound selected. The Pushbutton can be coded to sound one of three chime sounds.
2. Select the desired sound as illustrated in Figure 3.
3. Position the plastic jumper straps in the proper location for desired chime sound.

PUSHBUTTON SECURITY CODING

Refer to Figure 3.

It is not necessary to change the security code of the Pushbutton unless you experience interference from other wireless devices.

1. To change the security code, remove any combination of the six plastic jumper straps.
2. **NOTE: Both the Pushbutton and Receiver codes must match.**

BATTERY INSTALLATION

Refer to Figure 3.

1. Position the A23 12 volt battery as illustrated. **Be sure to observe polarity (+/-).**

INSTALLING PUSHBUTTON COVER

Refer to Figure 4.

1. Position the Pushbutton cover over the Pushbutton base. The red light must be lined up over the hole in the Pushbutton cover. Firmly press cover over base.

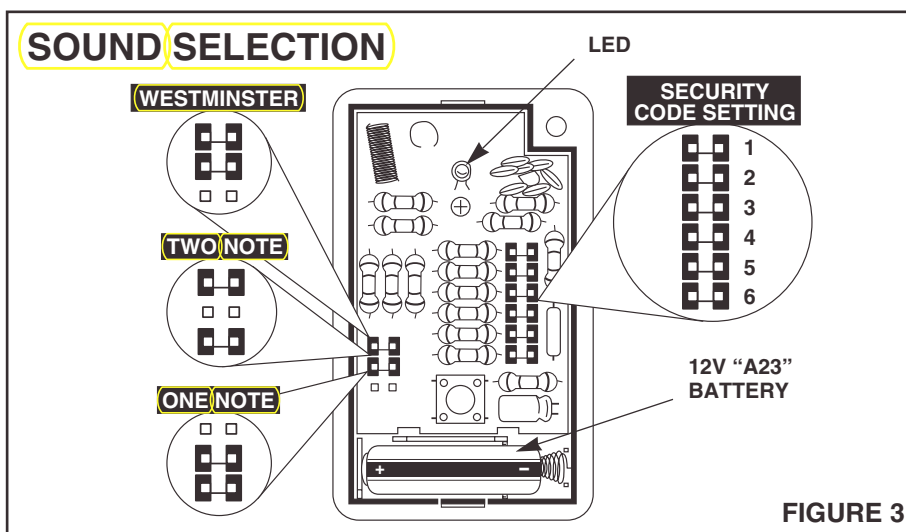


FIGURE 3

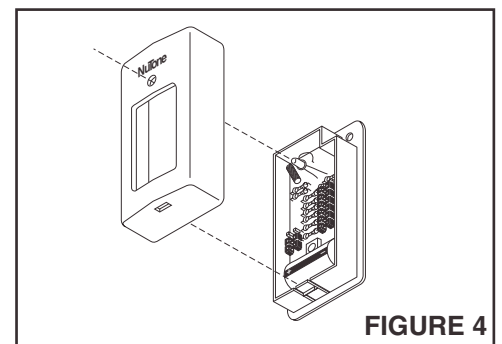


FIGURE 4

PREPARING THE RECEIVER

RECEIVER SECURITY CODING

Refer to Figure 5.

Changing the Security Code is not necessary unless you have changed the security code in the Pushbutton. **Both the Pushbutton and Receiver codes must match.**

1. Remove the screw from the code switch cover, then remove cover.
2. Refer to Figure 6. Set the switch in the Receiver to match the jumpers in the Pushbutton. The jumpers that are installed in the Pushbutton must correspond to the switches set to the ON position in the Receiver. For example, if jumper #1 is installed, Switch #1 is in the ON position.
3. After setting the switches, reinstall the code switch cover with screw.

MOUNTING THE RECEIVER

1. Plug the Receiver into any 120 volt wall outlet. Outlet must be located within 100 feet of the Pushbutton.

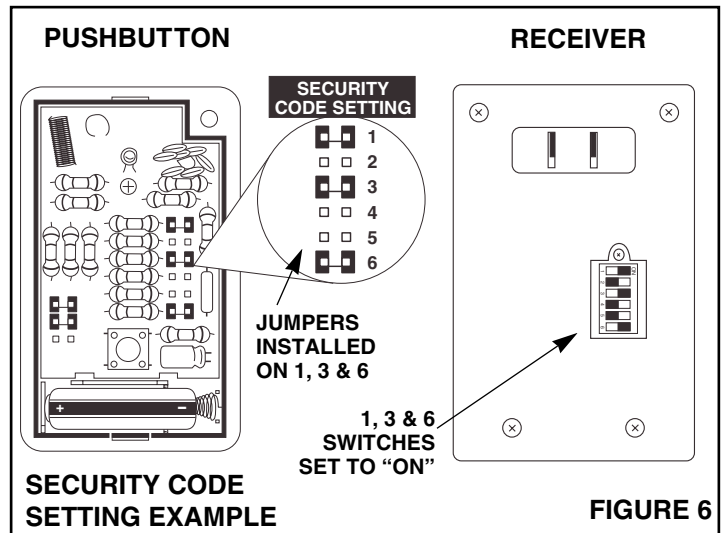


FIGURE 6

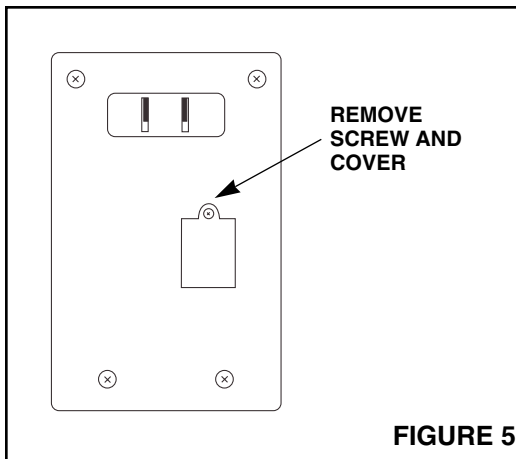


FIGURE 5

TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
1. Chime does not sound.	<ul style="list-style-type: none"> • Check battery and polarity in Pushbutton. • Make sure Pushbutton is not located on a metal surface. • Check that outlet on Receiver has power. • Check Receiver and Pushbutton security codes. These codes must match.
2. Chime is activated by another wireless device.	<ul style="list-style-type: none"> • Change the security code in the Pushbutton and Receiver. These codes must match.
3. When Pushbutton button is pressed, the incorrect chime sound is heard.	<ul style="list-style-type: none"> • Check the sound code jumpers in the Pushbutton.

NuTone®

One Year Limited Warranty

WARRANTY OWNER: NuTone warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workmanship for a period of one (1) year from the date of original purchase. **THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

During this one year period, NuTone will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service. **THIS WARRANTY DOES NOT EXTEND TO FLUORESCENT LAMP STARTERS OR TUBES, FILTERS, DUCT, ROOF CAPS, WALL CAPS AND OTHER ACCESSORIES FOR DUCTING.** This warranty does not cover (a) normal maintenance and service or (b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by NuTone), faulty installation or installation contrary to recommended installation instructions.

The duration of any implied warranty is limited to the one year period as specified for the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

NUTONE'S OBLIGATION TO REPAIR OR REPLACE, AT NUTONE'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. NUTONE SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties.

WARRANTY SERVICE: To qualify for warranty service, you must (a) notify NuTone at the address stated below or telephone 1/800-543-8687, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.

Date of Installation _____ Builder or Installer _____

Model No. and Product Description _____

IF YOU NEED ASSISTANCE OR SERVICE:
 For the location of your nearest NuTone Independent Authorized Service Center:
Residents of the contiguous United States Dial Free 1-800-543-8687
 Please be prepared to provide:
 Product model number • Date and Proof of purchase • The nature of the difficulty

Residents of Alaska or Hawaii should write to: NuTone Inc. Attn: Department of National Field Service, 4820 Red Bank Road, Cincinnati Ohio 45227-1599.
Residents of Canada should write to: Broan-NuTone Canada, 1140 Tristar Drive, Mississauga, Ontario, Canada L5T 1H9.

Rev. 03/2001